

Online Updater

The online updater is a one-time install for all versions up to and including Build 23

You will need:

- The SW powered on, TV/Display is optional.
- A blank USB Memory Stick
- Total time: less than 5 mins

Please follow these steps CAREFULLY; this part of the install gives limited feedback on its progress.

1. Download this file onto a blank USB memory stick, the file is just 10mb
<http://selfiewizard.co.uk/swiz/swiz.zip>

Do NOT try to open it


No you don't need the password

It MUST remain named swiz.zip – Just copy 'as is' onto a memory stick.

2. Insert USB Stick into the SW
3. **From a phone:**
 - a. Connect to the SW WiFi In your web browser
 - b. Enter: admin/
 - c. Go to: System Update
 - d. Click 'Yes'

OR.. From a Windows PC or Laptop:

- a. Connect to the SW WiFi In your web browser
 - b. Enter: selfiewizard/admin/
 - c. Go to: System Update Click 'Yes'
4. The install will take less than 1 minute
Your screen will refresh to show the following:

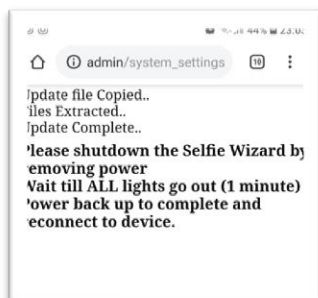

5. Reboot the SW by removing power for at least 1 minute until all lights go out then re-apply power.

The New Online Updater is now installed..!!

All future Updates to your Selfie Wizard will be done using the YELLOW Data cable and an internet connection through your home/office router.